

Innholdsfortegnelse

10 File formats

Upgrade to "as built" model

Approval of models and drawings

Reporting, documentation and archiving

Professional responsibility

.....

.....

.....

.....

.....

1

1

1

1

2

10 File formats

Bane NOR requires open international file formats, and supports the development of these. Until these formats are available for all subjects in transport, other formats can be delivered by agreement with the individual projects.

Upgrade to "as built" model

After feedback from the contractor, the designer shall upgrade the following models: result, display, coordination and source model to «as built» status.

- All updates are based on the contractor's own measurements and geometric quality control. If there is a need for supplementary measurements or correction of the contractor's delivery procedures, this is ordered through the client.
- Designers shall continuously upgrade all performance models to «as built» status in accordance with the contractor's progress and delivery of measurements.

Approval of models and drawings

All models and drawings must be checked and approved before delivery as described in the project's PDP and requirements for self-inspection. This must appear in the delivery.

The delivery is accepted by the recipient before these are considered delivered.

Reporting, documentation and archiving

Updates of basic data / planning material must be documented. Everyone in the project will be informed about such updates.

Reporting from advisers must be in accordance with the contract / agreement. Documentation shall not be sent directly from the consultant to the contractor without this having been agreed with the client / project. In all cases, the client must have a copy of the shipment.

- Guidance should normally be integrated into the tool
- In cases where this is not possible or the explanation that comes with the tool is too bad, a separate document is created called Guidance
- Guidance includes a detailed description of what or how a tool such as a computer system or other type of tool should be used
- Guidance may include requirements for the tool to be used correctly or for the result to be correct
- Guidance must be linked to the activities stated in the management system

The revision field and header retrieve data from the document profile in the ProArc archive system. Fill in the document profile. These fields in the document do NOT need to be changed manually.

Professional responsibility

The BIM manager in Bane NOR has overall responsibility for the field.

The BIM manager is responsible for reporting the status of his or her areas of responsibility within set deadlines and with good quality, in accordance with regulations that apply at all times in the associated division.

From:

<https://proing.banenor.no/wiki/> - **Prosjekteringsveileder**

Permanent link:

<https://proing.banenor.no/wiki/digitalplan-en/fileformats-en?rev=1642494117>

Last update: **2022/01/18 08:21**